

Wood's®

WHG-1 User Manual

Main function:

5 function keys: MODE, MAX/MIN, ▲12/24/ALARM, ▼C/F, SNOOZE
Week display in English
Time, calendar
Time in 12/24H
Temperature display in °C/°F
Indoor thermometer (0°C–+50°C)
Indoor hygrometer (20%-95%)
Alarm and snooze

2.0 Key function:

Function Controlling		MODE	▲12/24/ ALARM	▼C/F	SNOOZE	MAX/MIN
Normal	PRESS	Switch mode	ALARM ON/OFF	C/F switch off	----	Check MEM
	HOLD	Enter setting	12/24HR	----	----	----
Time setting	PRESS	Confirm setting	Ahead by step	Back by step	----	----
	HOLD	----	8 step/SEC ahead	8 step/SEC back	----	----
Alarm setting	PRESS	Confirm setting	Ahead by step	Back by step	SNZ	----
	HOLD	----	8 step/SEC ahead	8 step/SEC back	----	----

2.1 How to operation:

A. Normal mode

Press “MODE” to switch time, date and alarm
Hold “MODE” enter setting mode
Press “▲12/24/ALARM” on or off ALARM
Press “▼C/F” to switch C/F
Press “MAX/MIN” to display MAX/MIN value

When “ALARM” is on, press “SNOOZE” enter snooze function, and the snooze time is 8 minutes

B. Time setting

Press and hold “MODE” for 2 seconds to enter time setting

Setting item twinkling at 1HZ frequency.

Setting order: hour →minute →off set

Press “MODE” to confirm setting.

Press “▲ 12/24/ALARM” once and ahead; press for 2 seconds, go ahead at an 8 step/second speed.

Press “▼ C/F” once and back; press for 2 seconds, go back at an 8 step/second speed.

Without any effect handling more than 8 seconds, it returns from setting automatically, and save the set value.

C. Calendar setting

Press and hold MODE for 2 seconds to enter calendar setting

Setting item twinkling at 1HZ frequency.

Setting order: Year →Month →day →off set

Press “MODE” to confirm setting.

Press “▲ 12/24/ALARM” once and ahead; press for 2 seconds, go ahead at an 8 step/second speed.

Press “▼ C/F” once and back; press for 2 seconds, go back at an 8 step/second speed.

Without any effect handling more than 8 seconds, it returns from setting automatically, and save the set value.

D. Alarm setting

Press and hold MODE for 2 seconds to enter alarm setting

Setting item twinkling at 1HZ frequency.

Setting order: Hour →Minute →off set

Press “MODE” to confirm setting.

Press “▲ 12/24/ALARM” once and ahead; press for 2 seconds, go ahead at an 8 step/second speed.

Press “▼ C/F” once and back; press for 2 seconds, go back at an 8 step/second speed.

Without any effect handling more than 8 seconds, it returns from setting automatically, and save the set value.

Don't forget to press “▲ 12/24/ALARM” to on/off ALARM

The Alarm time will be last 2 minutes